
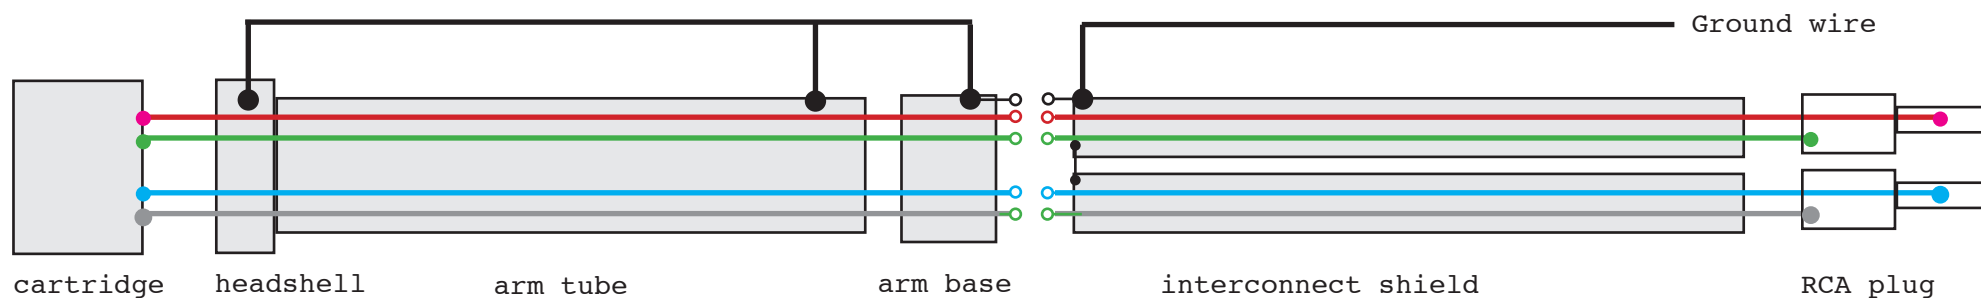


Wiring to 5-pin mini din connector

Best practice: The ground lead connects the metal of the arm and the screen of the interconnect using pin 3 of the connector but is not connected to the -ve of the signal path at all.

The interconnect should use two signal wires with a separate ground wire connected to screen and pin 3. **Avoid cables that have a single signal wire and use the screen for signal -ve**

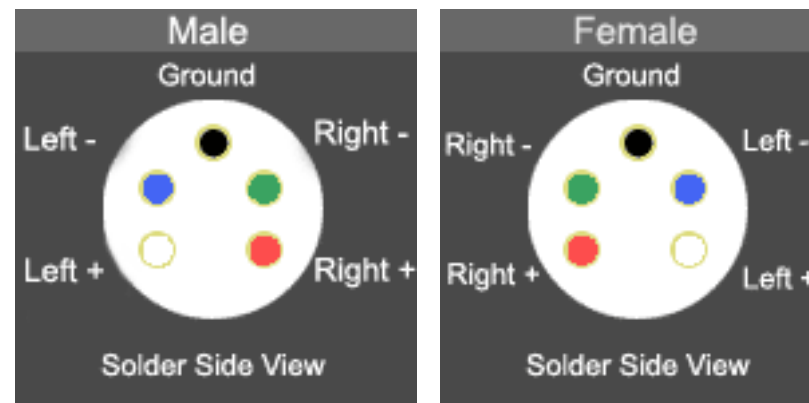

NOTE: The tonearm connectors commonly referred to as “mini-din” are not DIN-standard plugs, but a much older Japanese specification. They are properly just a “five-pin connector”. Interconnects sold for tonearms should have the correct one. A DIN plug will go onto the arm, but the pins are a different size and it won’t make a proper connection.

AUDIOMODS

5 Tormore Mews, Rectory Road, Deal, Kent CT14 9SX, England
Tel: +44 (0)1304 379698

www.audiomods.co.uk